 
 


Master_{TWO}

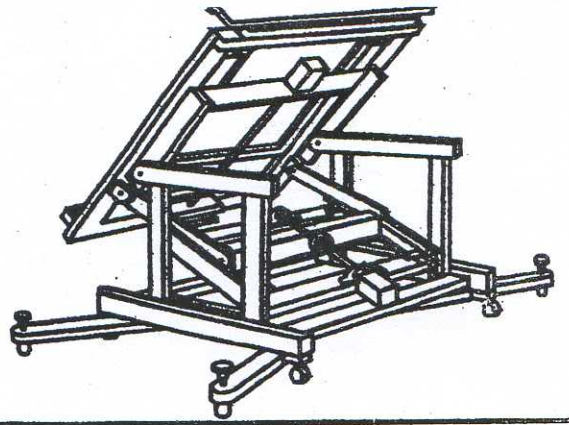


28X

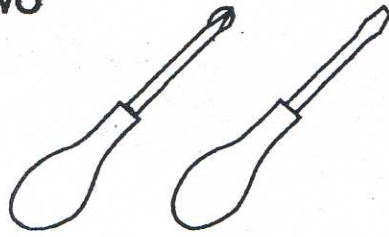

C850

6X

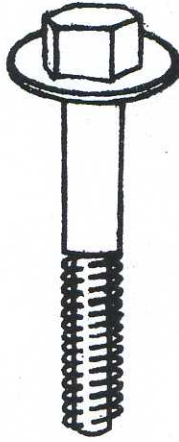


Y850

10X



C635

8X

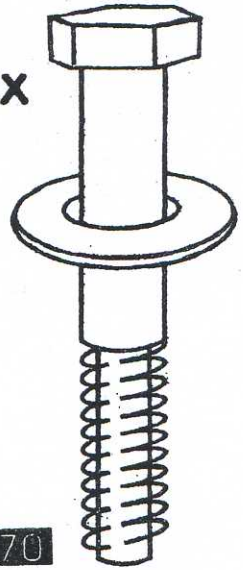


J1070

01





02

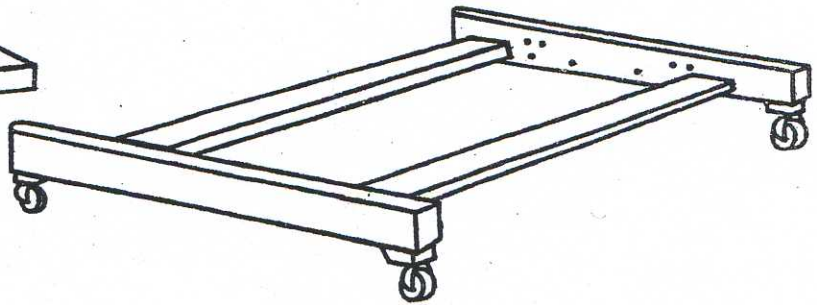




J1070

8X


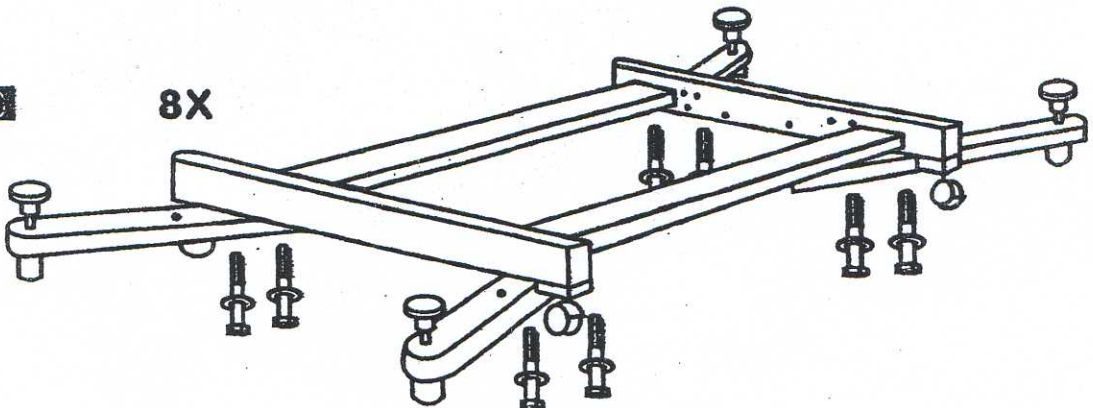


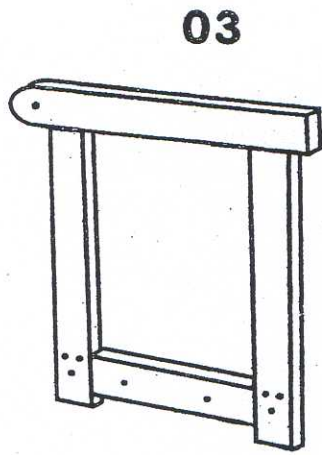




03

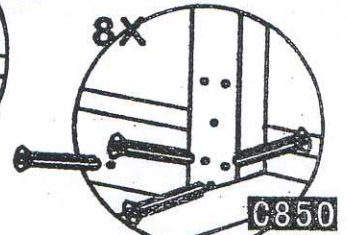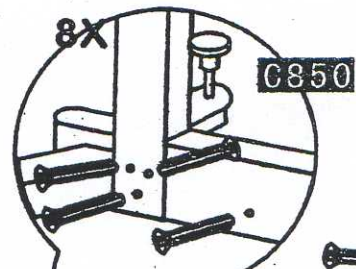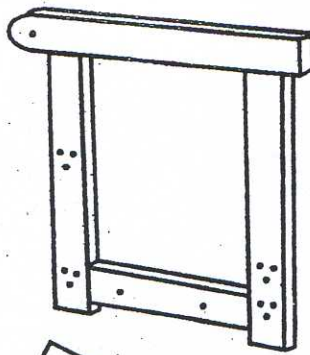


Both the round sides of the Base (02) and Knighthead(03) should be frontward.

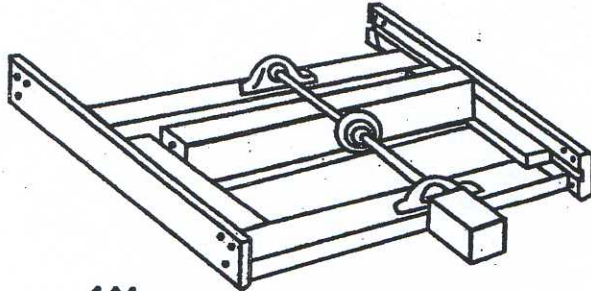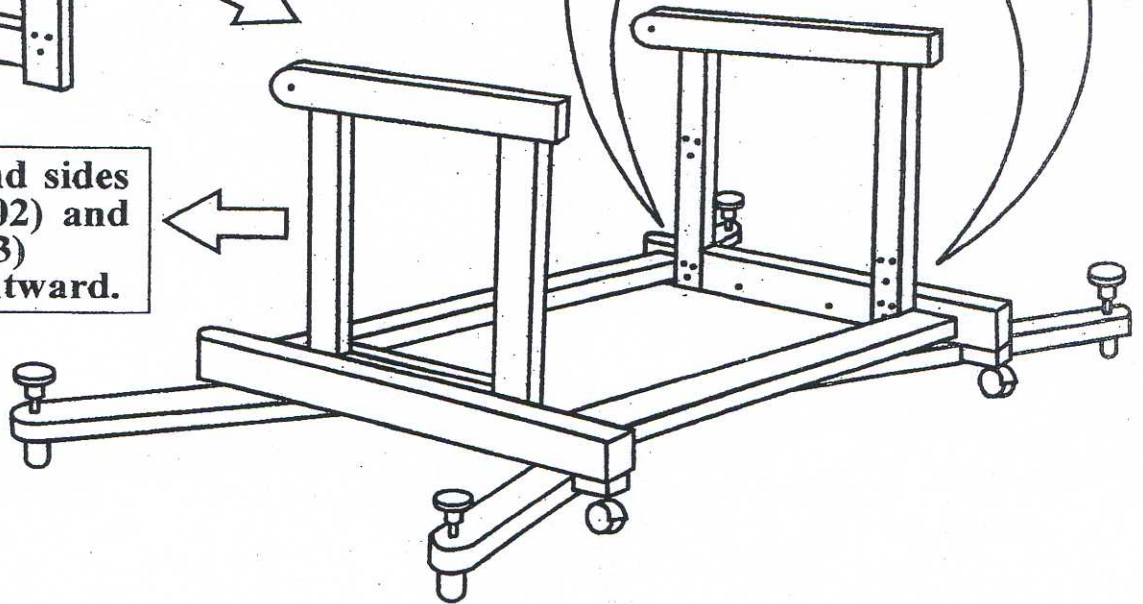

04

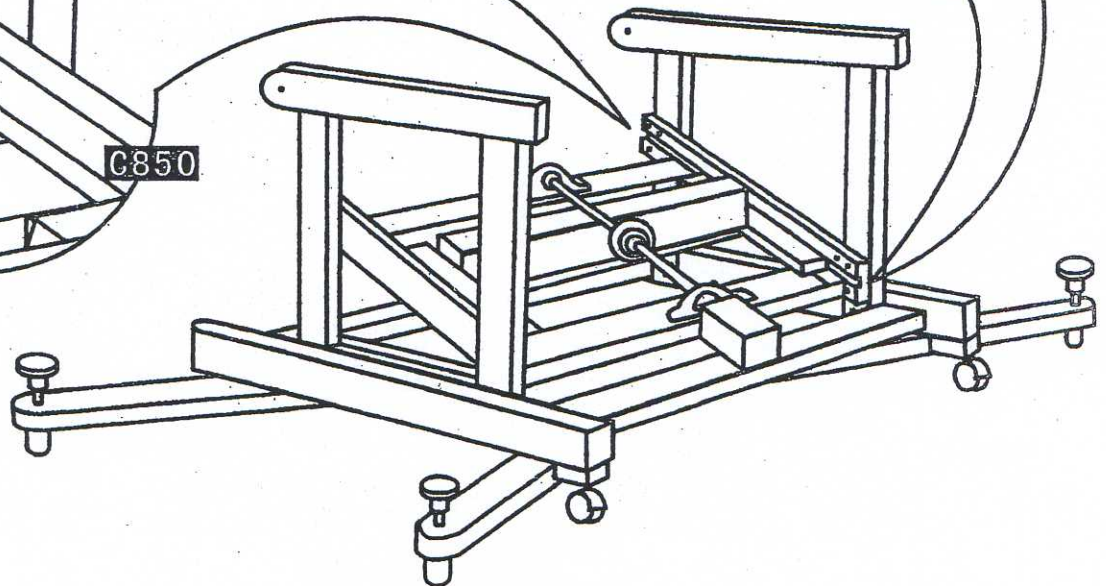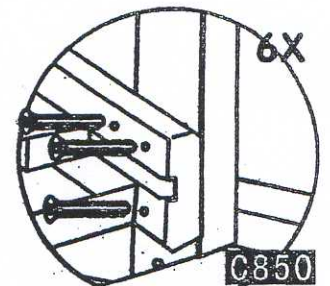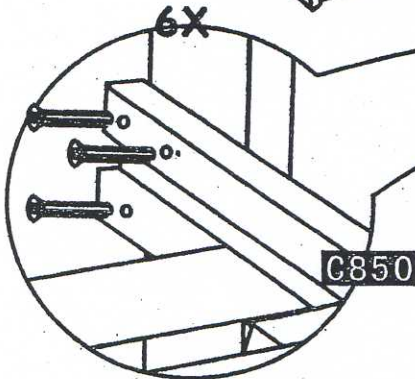


05

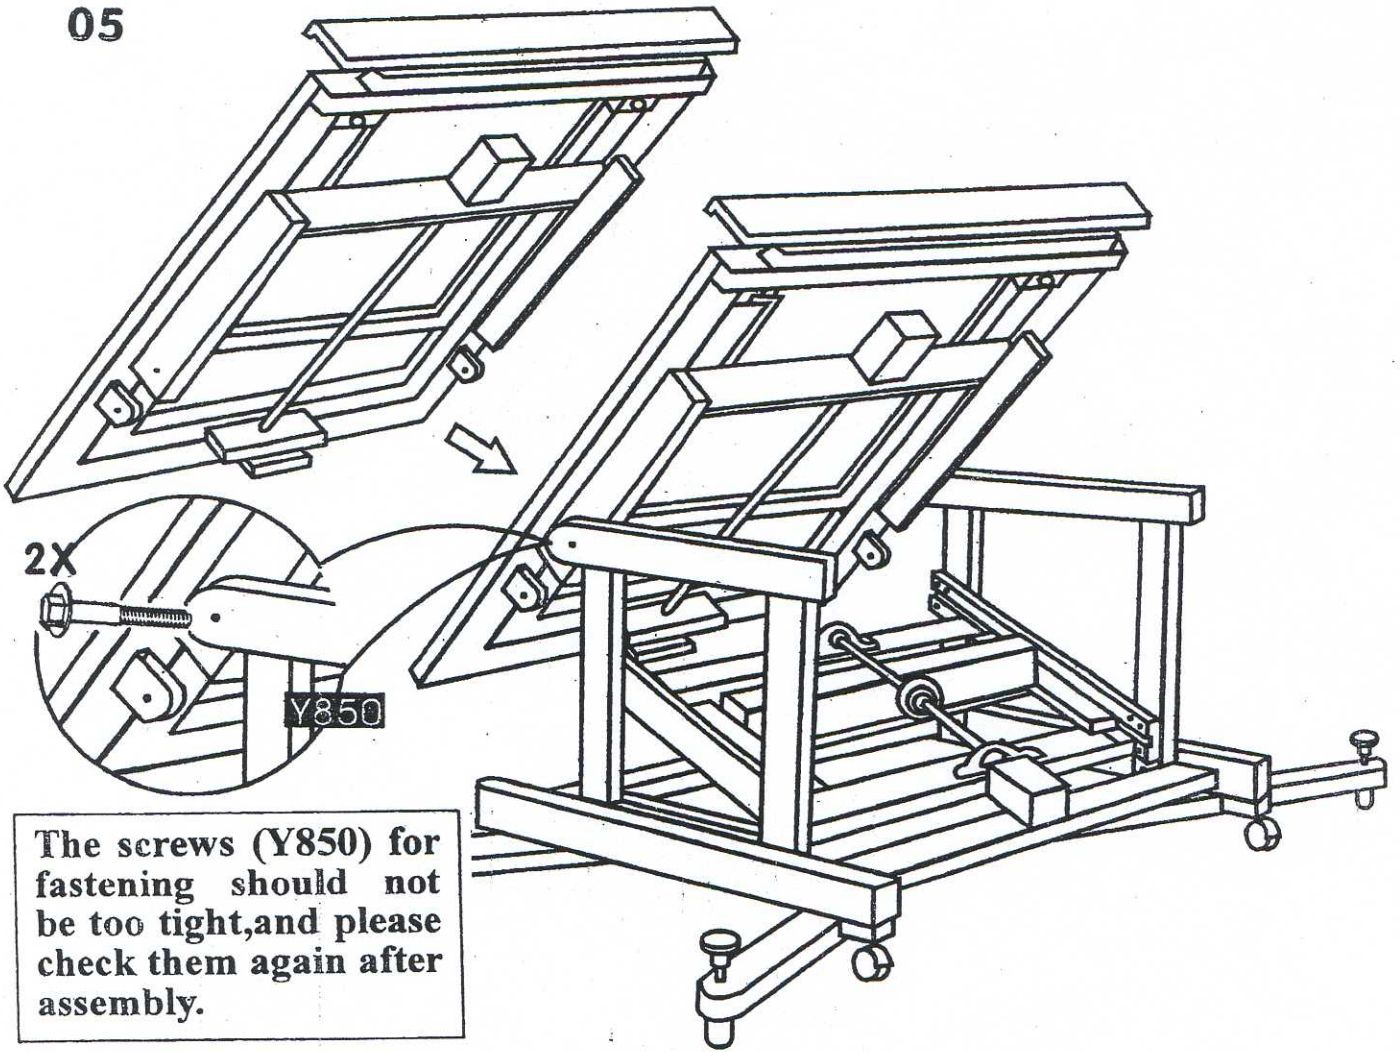


The screws (Y850) for fastening should not be too tight, and please check them again after assembly.


06

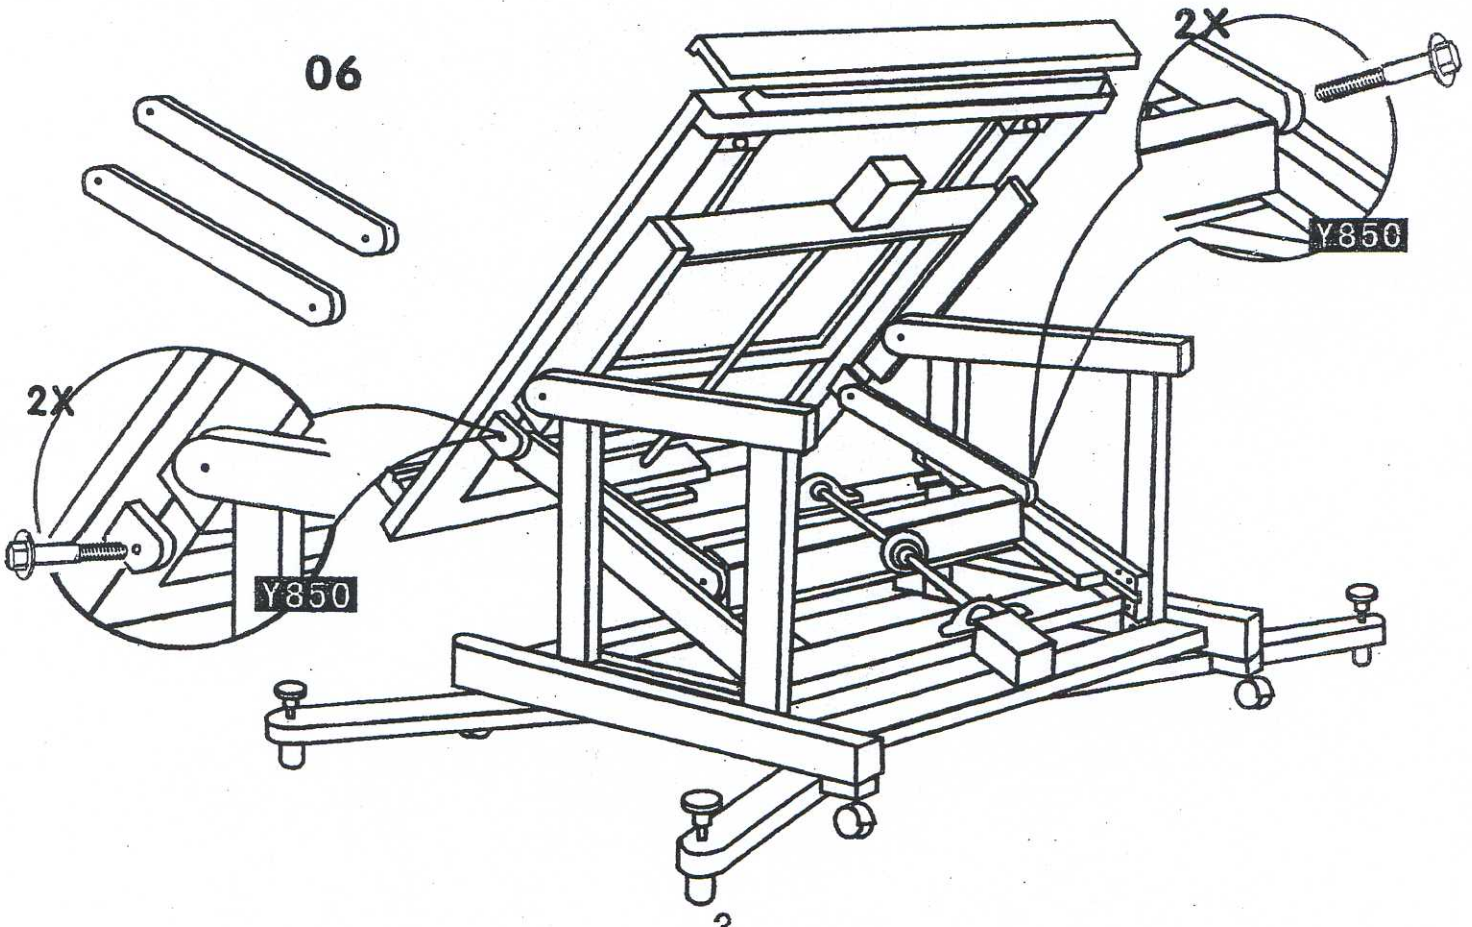


07

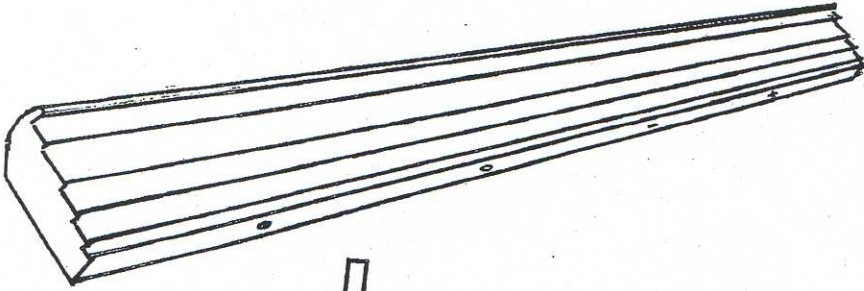

08

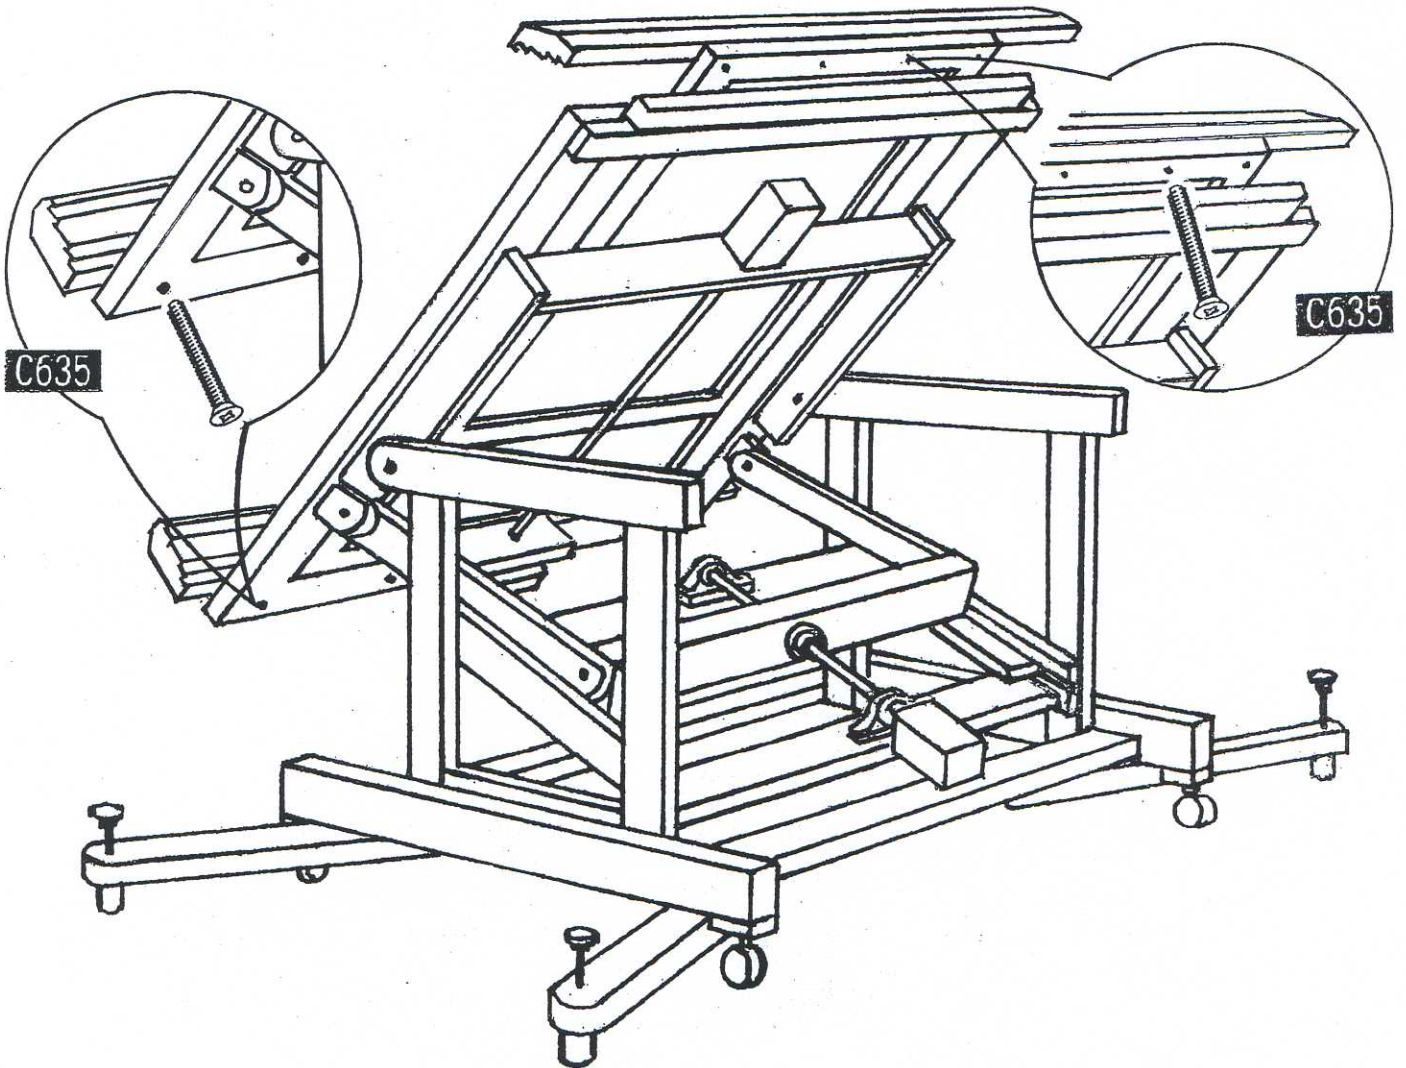

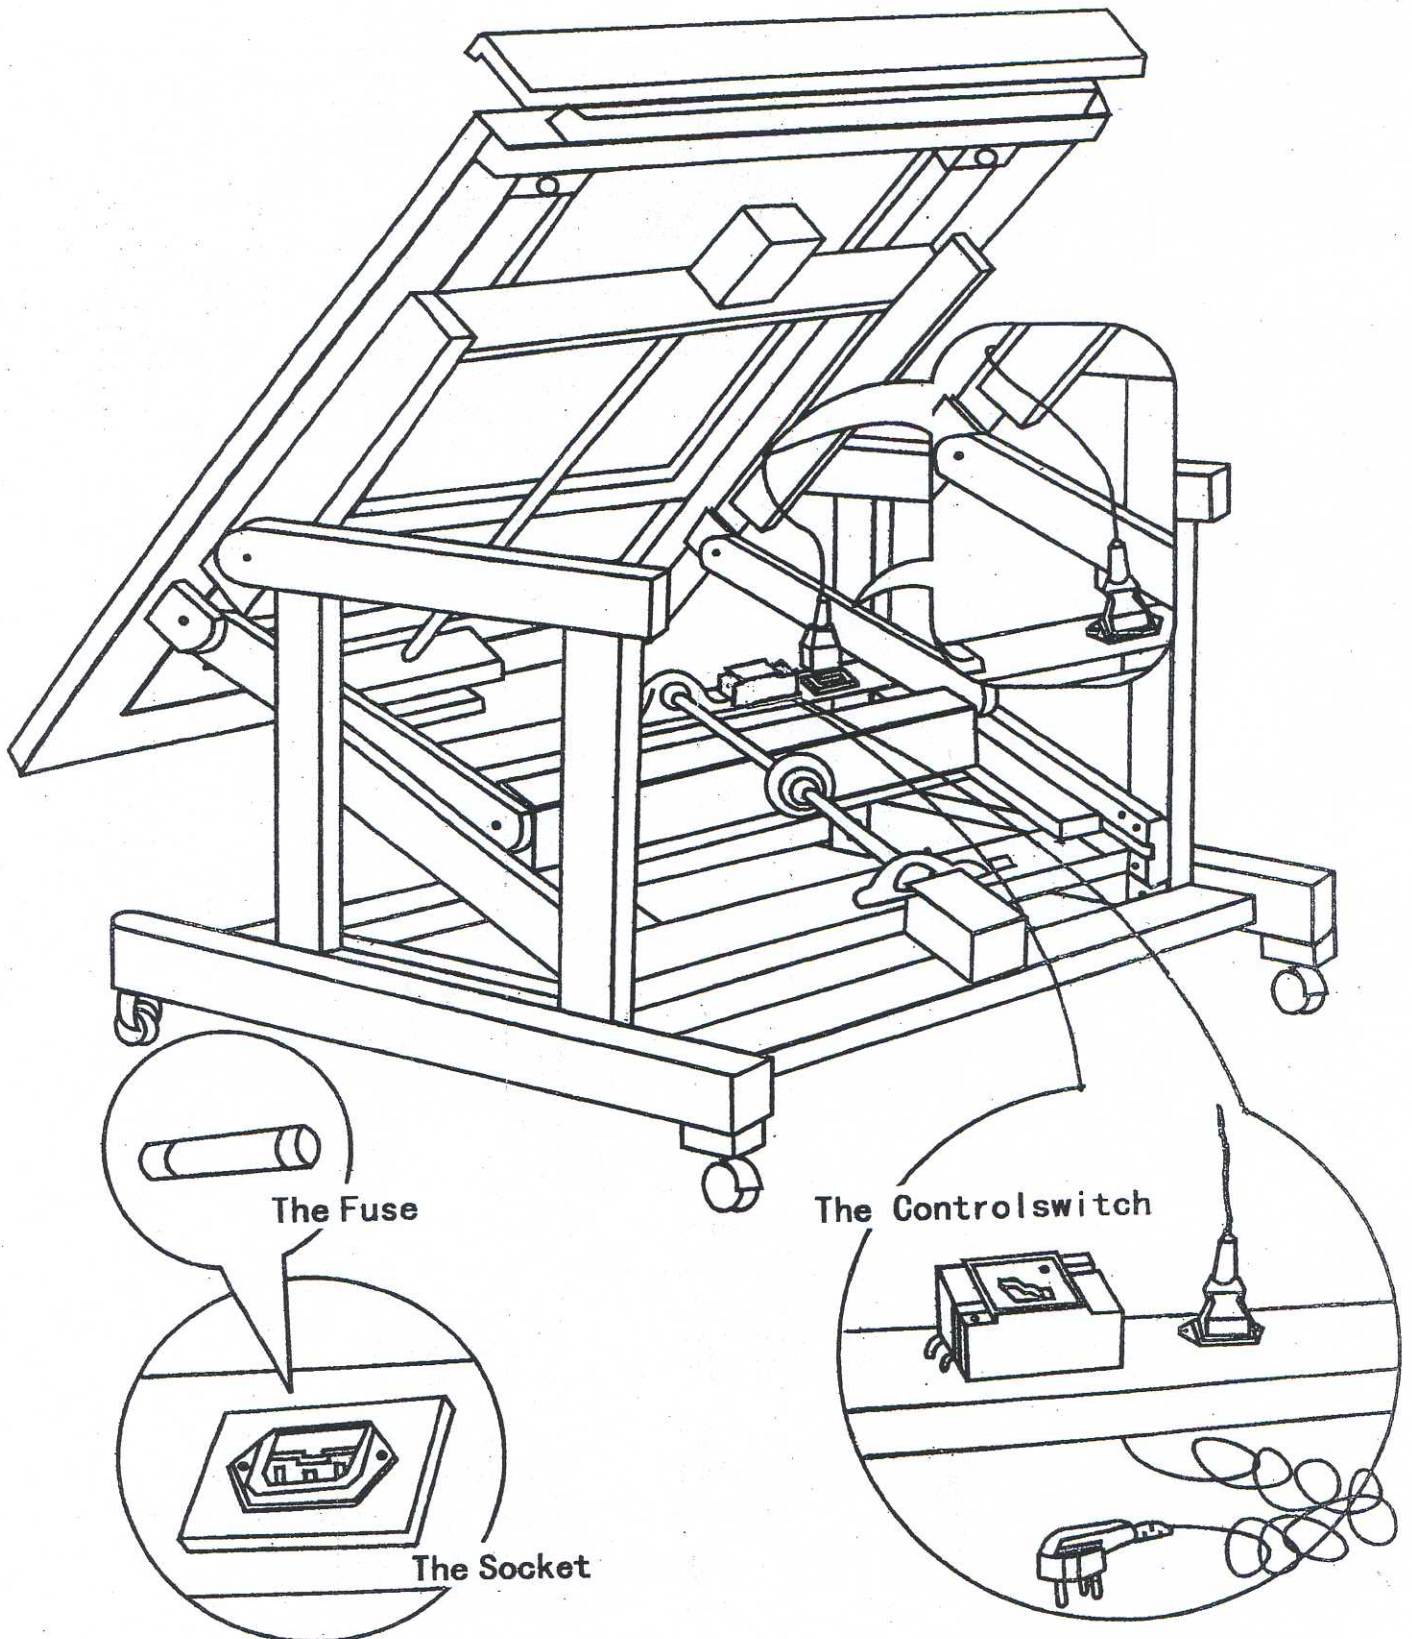



The Fuse

The Socket


The Controlswitch

A stocked Fuse for replacing once the used Fuse is blowout.



Please make sure the controlswitch is switched on after the power is connected.

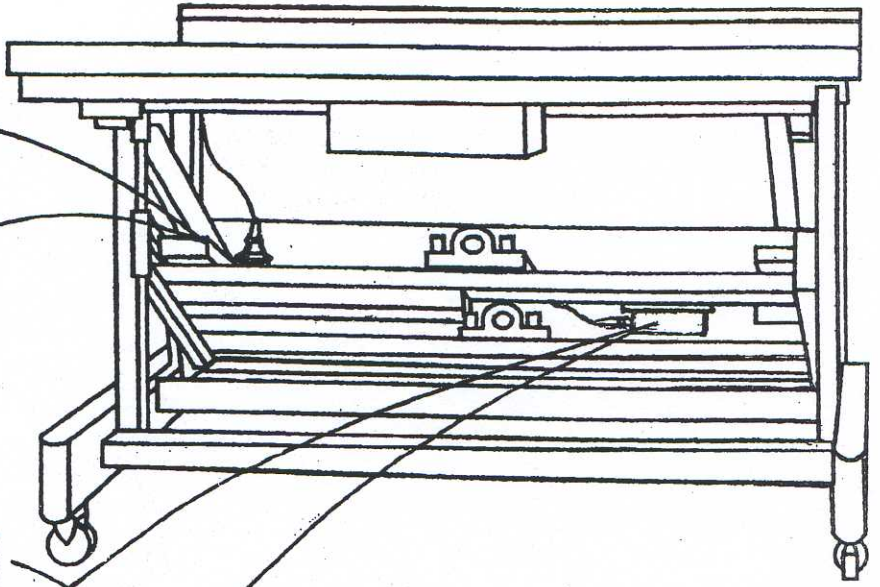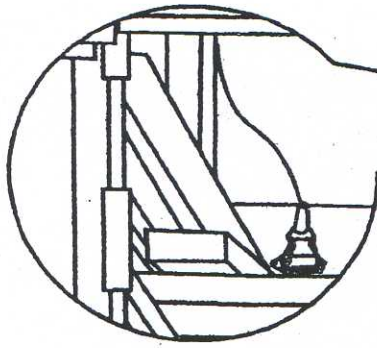



When take off the BNC, the contrller incept device can be changed fully.

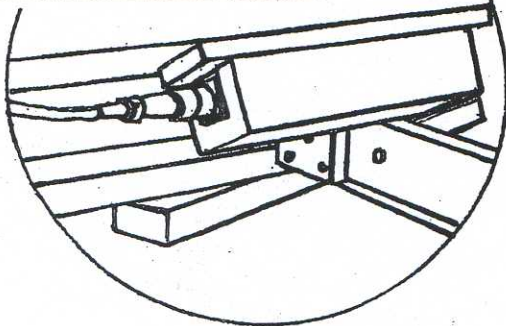

09

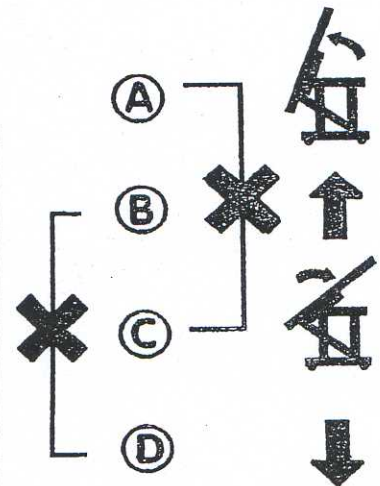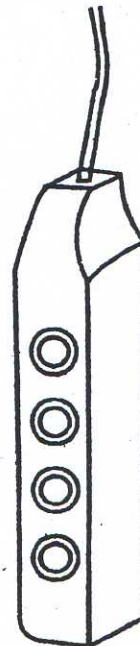

10

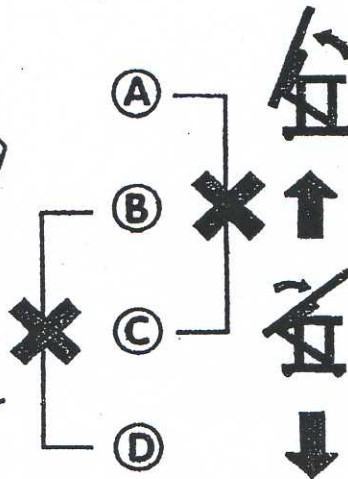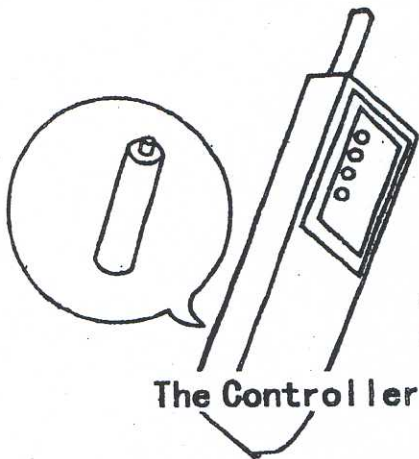

Attentions:
Handy controller can't be used with the electric controller together at the same time or the Fuse will be blowout.

Attentions:A and C,B and D can't be pressed together at the same time or the Fuse will be blowout.

When you canvases are heaver than 45kg,please give a hand when loading it up.