



BeauportTM Portable Outdoor Easel

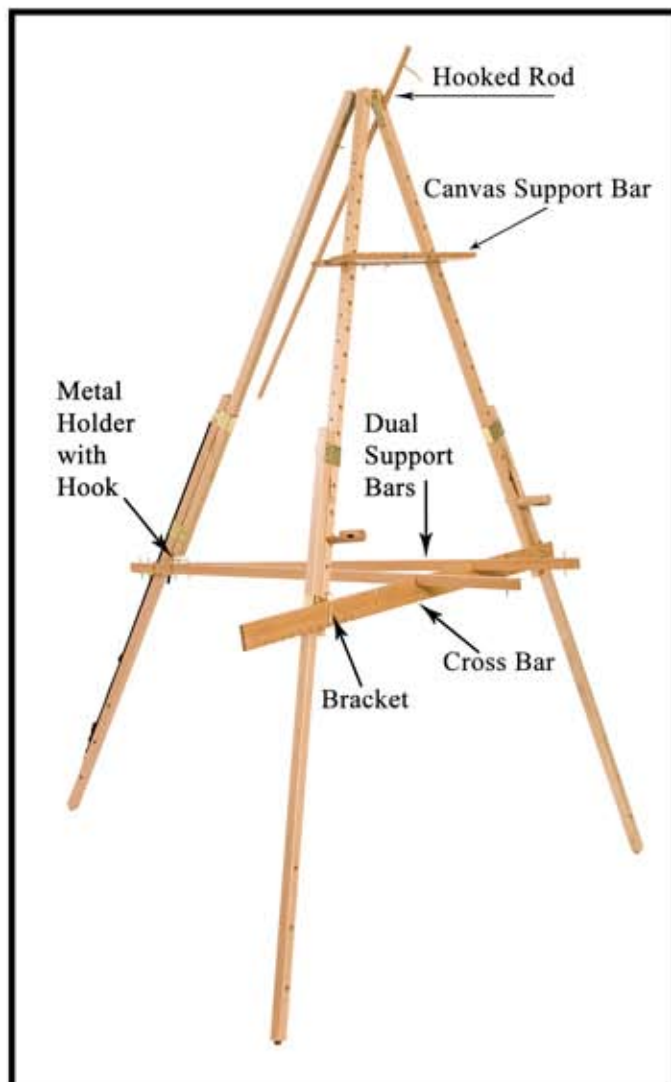

Parts

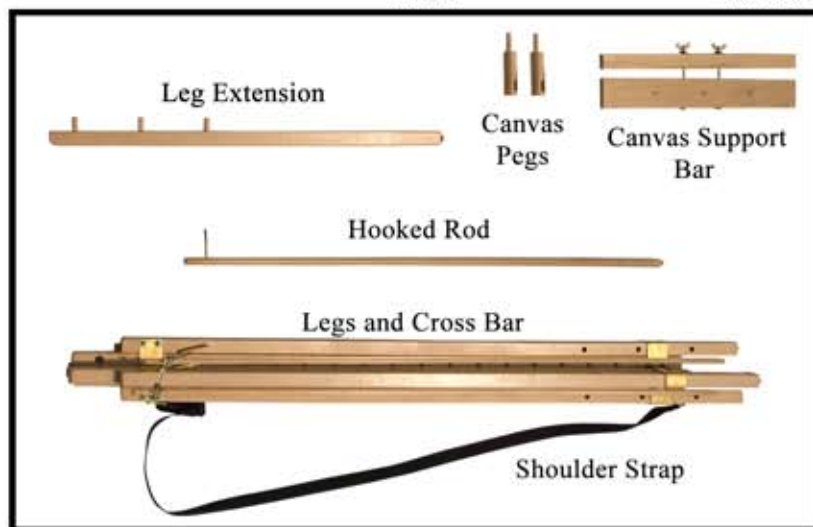

1. Unwrap the shoulder strap from around the easel. Remove the canvas support pegs, the hooked rod, and the leg extensions.

2. Pull the spring lever back and move the leg to desired height, releasing the lever when satisfied. The spring should snap into the hole, helping to ensure good spring tension for many years.



Step 2

3. Pull the cross bar down from its resting position on the right leg and into bracket on the left leg.

Step 4



4. The dual support bars will be attached to the easel by resting the front metal holder on the hook that is below the upper, back support (back leg).

5. Use either the canvas pegs or canvas support bar to hold painting surface.




Canvas Support Bar



Canvas Pegs

6. Place the hooked rod into one of the top holes at the desired angle to reduce glare on the painting surface. The hooked rod can be held in place with a bungee cord in windy conditions.

Step 6

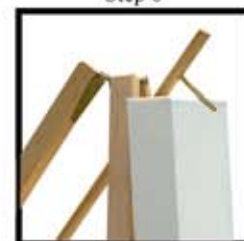

Leg Extension



7. Attach leg extension if more height is desired.