

# MARGAERIE TYRELL INSPIRED WEDDING CROWN

## SUPPLY LIST

HeatForm thermoplastic sheet: Black  
Craft foam  
Crown templates (at the end of this worksheet)  
Black acrylic paint  
Spray paint: gold; silver  
5-minute epoxy adhesive  
Heatgun  
Paint brush  
Bone folder  
Metal ruler with cork backing (use double sided tape to attach)  
Scissors: small and large  
Utility knife and Scalpel  
White marker (or other color that will show up on black)  
Small bottle such as a mini nail polish bottle for shaping  
Silicone or Teflon sheet

**Designer Tip:** Keep a bowl of cold water and a towel handy to dip your fingers into to cool them down if they get too hot.

Step 1: Photocopy the template and cut it out. Place the pieces on the HeatForm and trace out the five petals.



Step 2: Cut around the inside of the petals.



Step 3: Place the smallest petal onto the non-stick surface and heat it with the heatgun until it is pliable.



Step 4: Roll the petal so that it creates a small spiral in the center.



Step 5: Heat the second petal and wrap it around the spiral center. Roll the top edge of the petal over slightly.



Step 6: Heat the third petal and wrap it around the second one, rolling the edges as you wrap.



Step 7: Repeat with the fourth and fifth petals. Make two more roses.



Step 8: Gather some of your scraps and place them in a line on the non-stick mat. Heat them until they've softened.



Step 9: Use your fingers to work the scraps together into a log shape.




Step 10: Place a metal ruler on top of the log and roll it back and forth with light pressure. If the HeatForm cools down, reheat it on all sides with the heatgun and roll again.



Step 11: Continue heating and rolling until you have a long, smooth log approximately 5/32" thick.



Step 12: Use some more scrap HeatForm to make a pea sized ball. Form it into a bud by shaping it to a point at one end. Use the bone folder to score some petal marks in the bud.

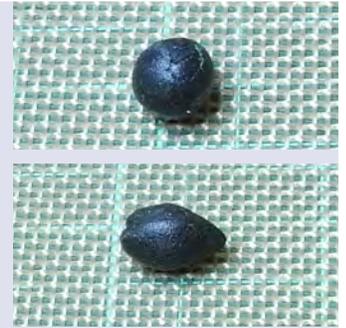

Step 13: Apply heat to the end of the HeatForm log until it softens and then press it onto the base of the rosebud. Smooth out the join by rolling it between your thumb and finger. You will need to make two long stemmed buds and one short one. Make a third long snake without a bud.




Step 14: Trace the crown template onto foam and cut approximately 1/16" - 1/8" inside the line.



Step 15: Trace the template onto the HeatForm. Flip the template over and trace a second crown.



Step 16: Heat the shiny side of one of the crowns and center the foam cut out on top. Press it into position firmly. Heat the shiny side of the second crown cut out and align it over the foam.

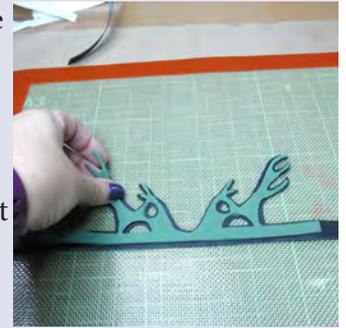

Step 17: Press the edges closed to encase the foam.



Step 18: For the finer details, you may need to ease the edges together by slightly stretching the HeatForm.



Step 19: Trim away any excess HeatForm.



Step 20: Heat the crown and form it around a cylinder the circumference of your head. Hold it in position until it holds its position.



Step 21: Heat the budless snake and press it onto the inside front of the crown as shown in the photograph. Curve it across the front right hand side of the crown.




Step 22: Trim the short-stemmed bud at an angle and heat the end.



Step 23: Weave a long-stemmed bud through the left hand side of the crown and attach the trimmed bud along the stem. Refer to the main photo for placement.



Step 24: Position a long stemmed bud across the front of the right hand side of the crown and trim it where it meets the budless stem. Heat and attach it to the stem and the crown. Create some thorns from scraps and attach them along the stems.

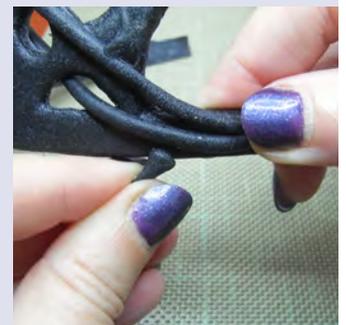

Step 25: Trim the bases of the three roses with the utility knife.



Step 26: Cut a 1" circle from a scrap of HeatForm and heat it.



Step 27: Place the circle over the lid of the nail polish bottle. N.B. Take care that it does not stick by removing it from time to time as you work. Ease in the fullness of the circle as much as you can, then press the remaining fullness onto itself. Smooth out the joins.



Step 28: Trim the top edge to make it even. Make three cups to fit the base of each rose.



Step 29: Heat the cups and attach them to the crown.



Step 30: Spray the crown gold and the roses silver.




Step 31: Antique the crown with black paint at any point where two parts meet.



Step 32: Glue the roses into position with 5-minute epoxy.



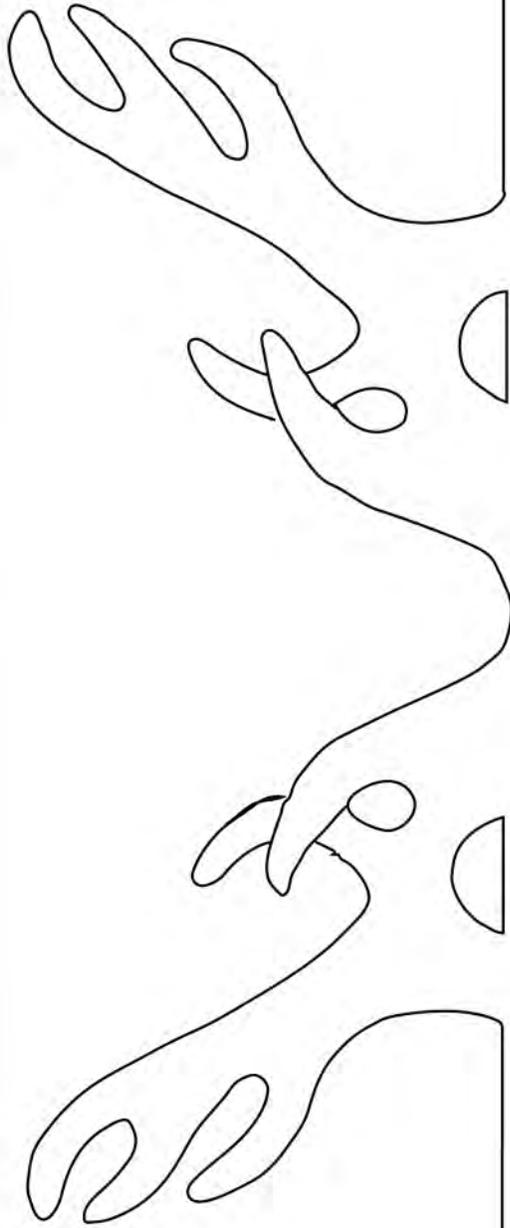

Cut band to length required



ENVIRONMENTAL  
TECHNOLOGY, INC.