



PLEASE NOTE: Two kits are required to assemble one complete frame.

Tools needed: Flathead & Phillips screwdriver.

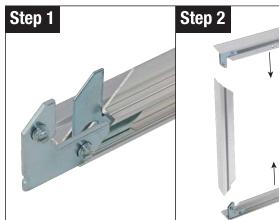


Working on a protective surface, insert a Corner **Bracket Set** into each end of one frame segment. Repeat for the opposite segment.

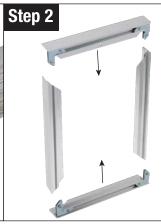

Slide each frame segment with brackets into the adjacent segments and loosely tighten the slotted screws.



Align each corner and fully tighten the slotted screws with a flathead screwdriver. Repeat for all corners.

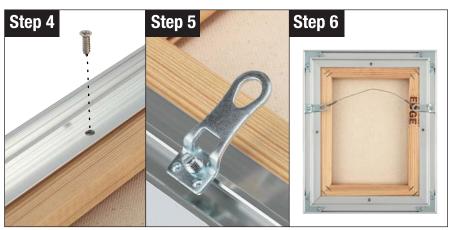

Insert your canvas into the front of the frame. Attach using the provided small wood screws and a Phillips screwdriver.

Insert a **Hanger** into each channel by tilting at an angle. Position each about a third of the way from the top. Tighten screws.

Thread the Wire through each Hanger, double if necessary, knot and twist wire to secure. Cut wire if needed. Complete!